



## HOW TO OPERATE THE CANDLE AND TIMER ON/OFF MODE"

- 1. Put the switch in the ON position to turn the candle on.
- 2. To turn the candle off, put the switch in the OFF position.

### "TIMER" MODE

- 1. To set the 5-hours timer, put the switch in the TIMER position.
- 2. The following day, if the settings have not been modified, the candle will automatically turn on at the same time and will turn off after 5 hours.
- 4. To change the starting time, put the switch in the OFF position and back to the TIMER position.
- 5. To deactivate the "TIMER", put the switch in the OFF position. To clean your candle lantern, use a soft, dry cloth.

#### **CAUTION**

- Avoid contact with standing water and protect from extreme weather.
- To increase the lifespan of your lantern, store indoors when not in use.
- This product contains a LED fameless candle. To avoid hazard, do not light the wick.
- Failure to insert batteries in the correct polarity, as indicated, may shorten the battery life or may cause them to leak.
- Replace all batteries at the same time.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium or Nickel Metal Hydride) batteries.
- Remove batteries if exhausted or if product is to be left unused for a long period of time.
- Do not dispose of batteries in fire.
- This is not a toy. For decorative use only. The lantern can be used indoors or outdoors.
- Batteries should be recycled or disposed of as per manufacturer' s recommendations.

# BATTERY OPERATED RATTAN LANTERN

#### **BATTERY INSTALLATION**

Your LED candles each require 2 AA type 1.5V alkaline batteries (not included) to achieve maximum battery life (up to about 300 hours of candlelight).

- 1. To open battery compartment, turn the candle upside down, remove the 6 screw to open the battery compartment.
- 2. Insert 2 AA type batteries into the compartment in the proper polarity as shown.
- 3. Close the battery compartment.